

Spielküche Ambiente

Play kitchen Ambiente

Aufbauanleitung

 
Assembly instructions

myToys


Bauteile

Components


Maße aufgebaut: 52 x 40 x 55 cm
Product size: 52 x 40 x 55 cm




A x 1

 


B x 1

 


C x 1

 


D x 1

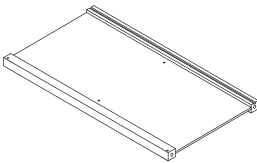 


E x 1

 


F x 1

 

G x 1

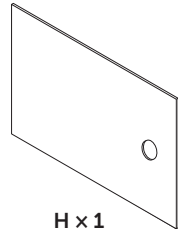 

H x 1

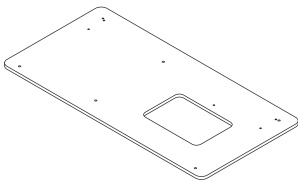 


I x 1




J x 2



 
K x 1

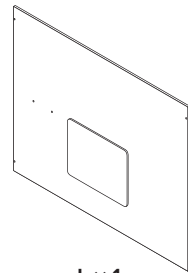


L x 1

 


M x 1

 

N x 1

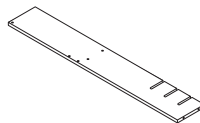 

O x 1

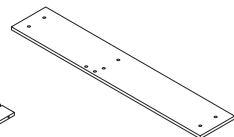 


P x 1




Q x 1



 
R x 1




S x 1

 


T x 1

 

U x 1

 

V x 2

 

W x 1



X x 2



Y x 1



Z x 1



a x 43



b x 6

 


c x 4



x 1

Accessoires



x 1



x 1



x 1



x 1



x 1

 


x 1




x 3


Aufbau Assembly

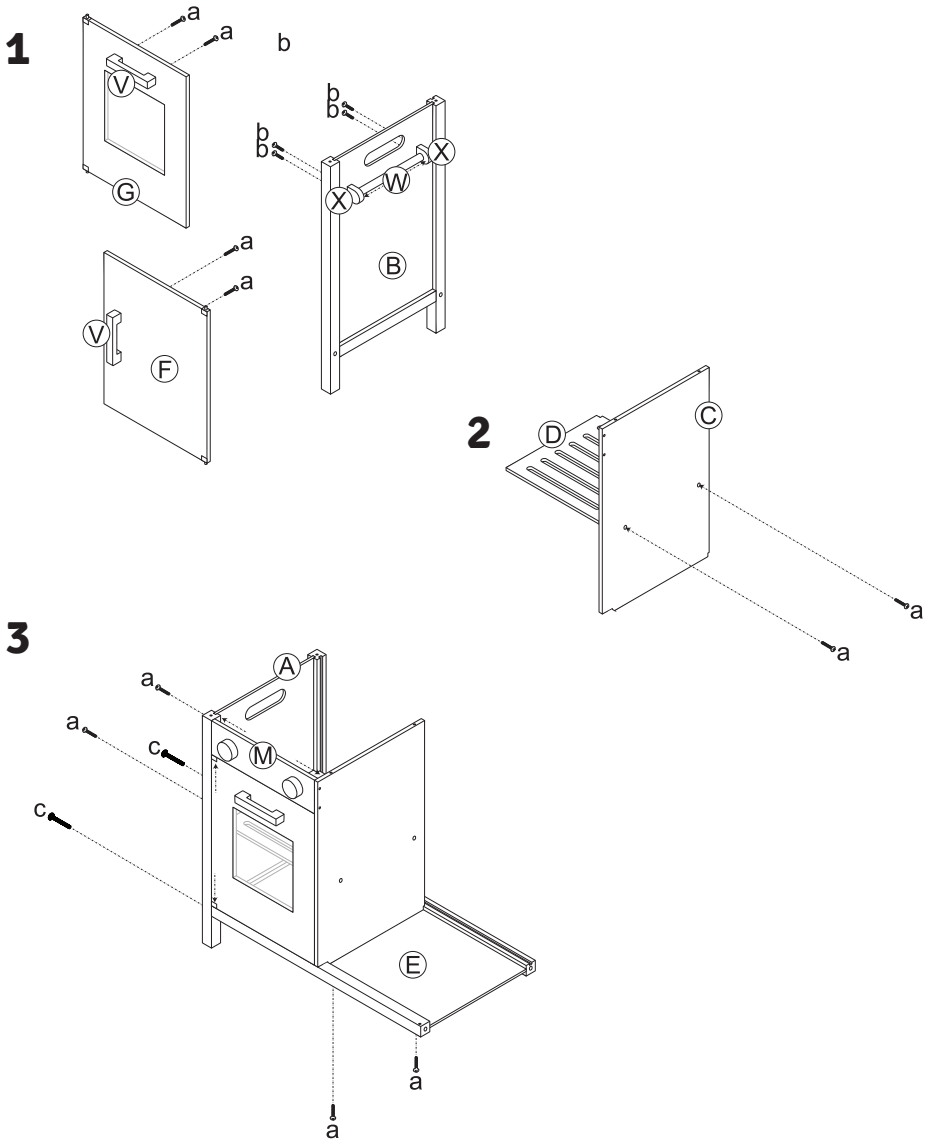


7

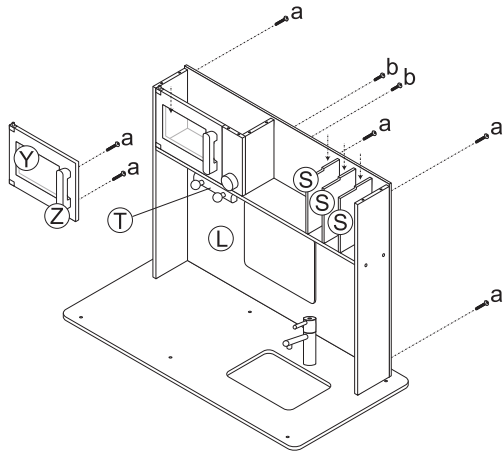 

8

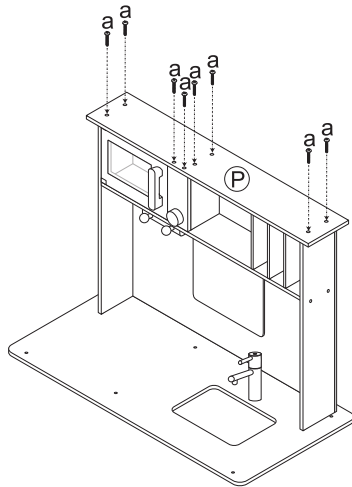 

9

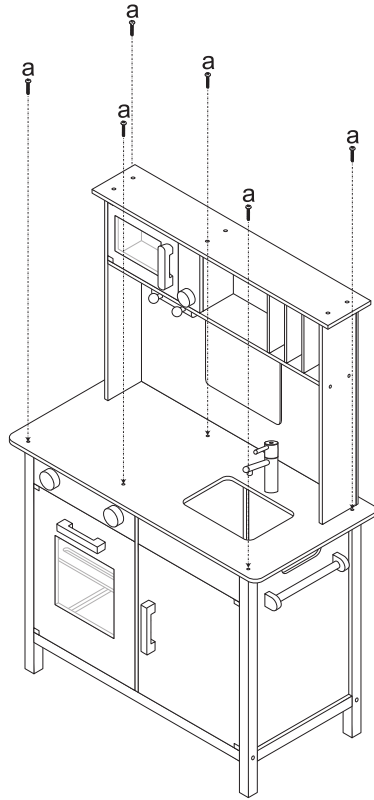 

DE

Achtung! Nicht für Kinder unter 36 Monaten geeignet. Erstickungsgefahr aufgrund verschluckbarer Kleinteile. Dieses Spielzeug darf ausschließlich von Erwachsenen fertig montiert werden. Es könnte vor dem Zusammenbau eine Gefahr von scharfen Kanten ausgehen. Eine nicht korrekte Montage könnte eine Verletzung der Kinder zur Folge haben. Schrauben können sich bei längerem Gebrauch lösen. Bitte kontrollieren Sie die Schrauben regelmäßig und ziehen Sie diese gegebenenfalls nach. Die Spielküche sollte nicht freistehend, sondern an einer Wand aufgebaut werden, um ein Umkippen des Artikels beim Spielen zu vermeiden. Bitte befüllen Sie die Metallschüssel nicht mit Wasser, da das Holz sonst aufquellen kann. Bitte bewahren Sie die Verpackung für Kommunikationszwecke auf. Bitte entfernen Sie alle Verpackungselemente, bevor Kinder damit spielen.

EN

Warning! Not suitable for children under 36 months. Choking hazard due to small parts. This toy is required to be assembled by adults only. It may contain sharp points before assembly. Incorrect assembly could injure children. Screws may loosen over time, please inspect all screws periodically and tighten them if necessary. The kitchen should lean against a wall to ensure that the item cannot tumble while playing. Please do not fill the bowl with water as the wood can swell up. Keep the packaging for any possible future correspondence. All clips, binders, rubber bands, plastic bags and other packaging material are not part of the toy. Please remove them before giving the toy to your child.

Hergestellt für/Manufactured for:
myToys.de GmbH
Potsdamer Straße 192
10783 Berlin
Germany

Artikelnummer: 5528093
Chargen-Nr.: 201707155528093



The myToys logo features the brand name in a playful, rounded, and bubbly font style.