

2 Pop-Up Fußballtore

2 Pop-Up soccer goals











Aufbau- und Gebrauchsanleitung
Assembly and user instructions

DE: Bitte lesen Sie vor Gebrauch sorgfältig die Bedienungsanleitung.

EN: Please read the instruction manual carefully before use.

Aufbau

Assembly

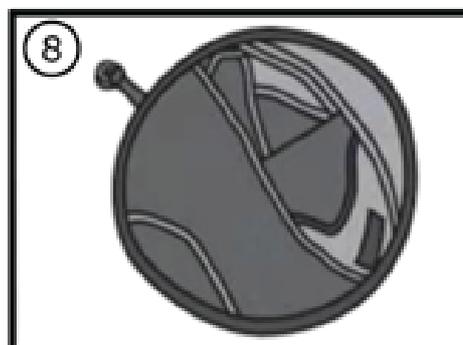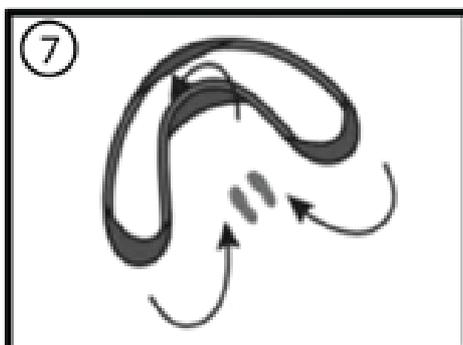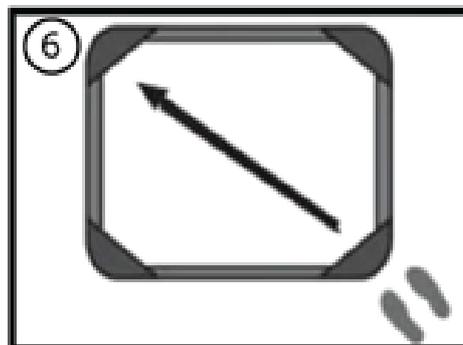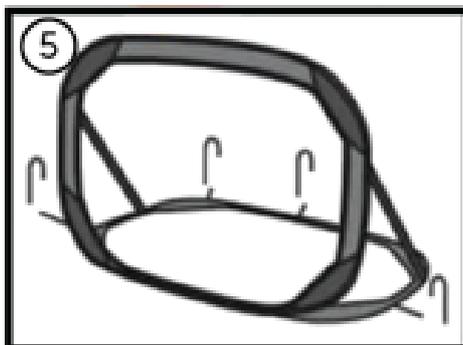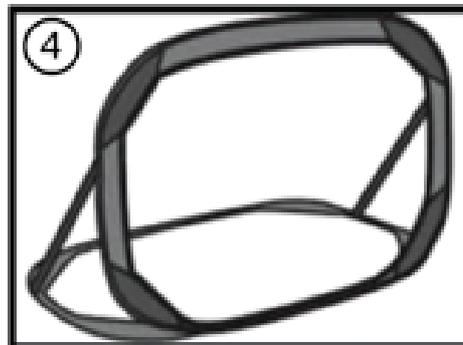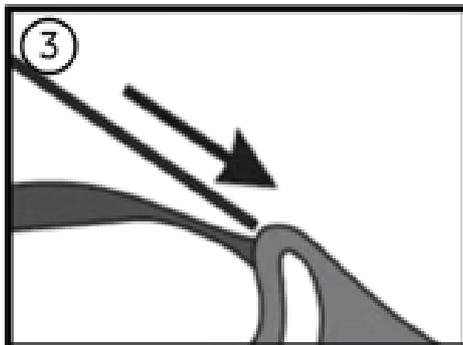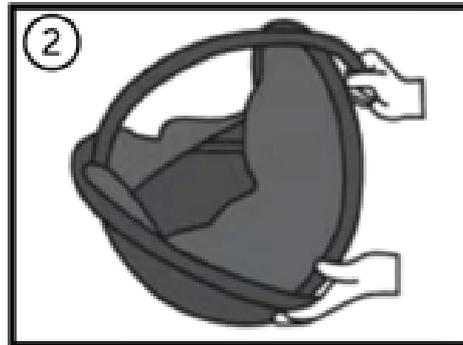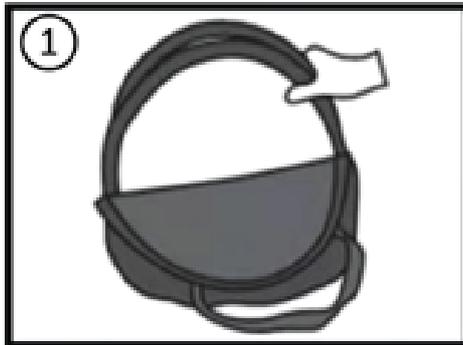

myToys

Aufbau- und Gebrauchsanleitung

Die Benutzung des Produktes erfordert bestimmte Fähigkeiten und Kenntnisse. Setzen Sie es nur altersgerecht ein und benutzen Sie das Produkt ausschließlich für seinen vorgesehenen Zweck.

Inhalt

- 2 x Pop-Up Fußballtor
- 2 x 2 Stangen
- 2 x 4 Heringe
- 1 x Tragetasche
- 1 x Diese Anleitung

TECHNISCHE SPEZIFIKATIONEN

Maße aufgebaut: 120 x 80 x 80 cm, gefaltet: ca. 38 x 38 x 2 cm
Gewicht: ca. 0,8 kg pro Tor

Weitere Teile, die unter Umständen in der Lieferung enthalten sind, werden nicht benötigt.
Achten Sie auf genügend Abstand zum Gesicht! Das Fußballtor entfaltet sich von selbst.

AUFBAU- UND FALTANLEITUNG

Die Pop-Up Fußballtore von myToys sind in Sekundenschnelle aufgebaut und wieder zusammengefaltet. Der Auf- und Abbau sollte von Erwachsenen vorgenommen werden.

AUFBAU:

- Entnehmen Sie das Fußballtor der Tasche. Das Produkt entfaltet sich in wenigen Sekunden von selbst.
- Stecken Sie die beiden Teile der Stangen ineinander.
- Fixieren Sie die seitlichen Streben des Tores mit Hilfe der Stangen.
- Öffnen Sie dazu den Reißverschluss der Strebentaschen und führen Sie die Stangen ein. Schließen Sie den Reißverschluss anschließend wieder.

STANDSICHERUNG DES TORES:

- Fixieren Sie den Torrahmen mit Hilfe der Heringe am Boden. Vergewissern Sie sich, dass der Boden zur Verwendung von Heringen geeignet ist (z.B. keine Wasserleitung für Rasensprekieranlagen).
- Stellen Sie dabei sicher, dass die Heringe ganz in den Boden eingeschlagen sind und fest sitzen.
- Vermeiden Sie herausragende Haken (Stolpergefahr). Auf zu festen Böden muss das Tor durch geeignete Maßnahmen anders vor dem Umstürzen gesichert werden, um Verletzungsgefahren vorzubeugen.
- Nie mit einem ungesicherten Tor spielen bzw. Tor nie ungesichert stehen lassen.

ABBAU:

- Entsichern Sie das Tor und entnehmen Sie die Stangen der seitlichen Strebentaschen. Mit der richtigen Technik und ein wenig Übung lässt sich die das Fußballtor kinderleicht und schnell wieder zusammenfallen (Abb. 1 - 4).

NUTZUNGSHINWEISE

- Bauen Sie das Tor ausschließlich auf einer ebenen Fläche auf.
- Bitte beachten Sie für das aufgebaute Tor einen Mindestabstand von 3 m zu umliegenden Hindernissen.
- Sichern Sie das Tor immer gegen Umstürzen – auch bei Nichtbenutzung.
- Setzen Sie das Produkt nicht unnötig schlechten Wetterbedingungen aus. Lagern Sie es trocken und kühl.

The logo for myToys, featuring the brand name in a stylized, rounded, black-outlined font.

Pflege- und Wartungsanweisungen

- Reinigen Sie das Produkt nur mit einem Tuch oder feuchten Lappen und nicht mit speziellen Reinigungsmitteln!
- Überprüfen Sie das Produkt vor und nach Gebrauch auf Schäden und Verschleißspuren.
- Nehmen Sie keine baulichen Veränderungen vor!
- Verwenden Sie zu Ihrer eigenen Sicherheit nur Originalersatzteile.
- Sollten Teile beschädigt sein oder scharfe Ecken und Kanten entstanden sein, darf das Produkt nicht mehr verwendet werden! Nehmen Sie im Zweifel mit unserem Service Kontakt auf.
- Lagern Sie das Produkt an einem sicheren, witterungsgeschützten Ort, sodass es nicht beschädigt werden kann oder Personen verletzen kann.

Entsorgungshinweis

Bitte führen Sie das Produkt am Ende seiner Lebensdauer den zur Verfügung stehenden Rückgabe- und Sammelsystemen zu. Fragen beantworten die Entsorgungsunternehmen vor Ort.

The logo for 'myToys' is located in the bottom right corner of the page. It features the word 'myToys' in a stylized, rounded, and bubbly font. The letters are white with a thick black outline, giving it a playful and child-friendly appearance.

Instructions on Assembly and use

The use of the product requires certain capabilities and skills. Always adjust according to the age of the user and use for the purpose it has been designed for.

Contents

- 2 x Pop-Up soccer goals
- 2 x 2 Posts
- 2 x 4 Tent pegs
- 1 x carrying case
- 1 x these instructions

TECHNICAL SPECIFICATIONS

Dimensions: assembled: 120 x 80 x 80 cm, folded: approx. 38 x 38 x 2 cm

Weight: Approx. 0.8 kg per goal

Other parts which may be included with the delivery in some circumstances are not required. Pay attention to a sufficient distance from the face. The soccer goal unfolds by itself.

ASSEMBLY AND FOLDING INSTRUCTIONS

The Pop-Up soccer goal from myToys is set up and folded back together within seconds. Set-up and disassembly should be done by adults.

ASSEMBLY

- Remove the soccer goal from the bag. The product unfolds on its own within a few seconds.
- Plug the two parts of the rods into one another.
- Fix the side stabilizers of the goal with the help of the rods.
- Simply pull the zipper of the stabilizer pouch open for this purpose and introduce the rods. Subsequently pull the zipper closed again.

STAND LOCKING OF THE GOAL

- Finally fix the goal frame by means of the pegs on the ground. Ascertain that the ground is suitable for the application of pegs (e.g. no water pipes for sprinkler devices!).
- Make sure that the pegs are completely driven into the ground and have firm position.
- Avoid protruding fastenings (risk of stumbling). On too hard grounds the goal must be saved by appropriate measures in another way against overturning in order to prevent risk of injuries.
- Never play with an unsecured goal or never leave the goal unsecured respectively.

FOLDING:

- Remove the anchoring of the goal followed by the removal of the rods from the side stabilizer pouch. With the right technique and a little practice, the goal can be easily and quickly folded back (Picture 1- 4).

USAGE INSTRUCTIONS

- Only set up the goal on level ground.
- Please keep a minimum distance of at least 3 m to any surrounding obstacles.
- Secure the goal to keep it from toppling over — even if not in use.
- Avoid exposing the product unnecessarily to bad weather conditions. Keep it in a cool and dry storage area.

The logo for myToys, featuring the word "myToys" in a stylized, rounded, white font with a black outline, set against a black background.

Care and maintenance instructions

- Use a dry or damp cloth only to clean the product; do not use special cleaning agents!
- Check the product for damage or traces of wear and tear before and after each use.
- Do not make any structural changes.
- For your own safety, please use original spare parts only.
- Damaged or if sharp edges or corners should develop, the product may not be used any more.
- Store the product in a safe place where it is protected from the elements, cannot be damaged, and cannot injure anyone.

Disposal Advice

At the end of the product's life, please dispose of it at an appropriate collection point provided in your area. Local waste management companies will be able to answer your questions on this.

The logo for 'myToys' is located in the bottom right corner of the page. It features the word 'myToys' in a stylized, rounded, and bubbly font. The letters are white with a thick black outline, giving it a playful and child-friendly appearance.

Warnhinweise

Warnings

DE: Achtung! Nicht für Kinder unter 36 Monaten geeignet. Strangulationsgefahr durch Schlaufenbildung. Prüfen Sie den Zustand des Artikels, bevor Ihr Kind damit spielt. Im Fall von Beschädigungen entfernen Sie den Artikel oder die betroffenen Komponenten aus der Reichweite Ihres Kindes. Der Auf- und Abbau sollte durch Erwachsene vorgenommen werden. Stellen Sie den Artikel auf einem ebenen Untergrund auf. Ein Aufbau auf unebenem Untergrund könnte die Stabilität des Artikels beeinträchtigen und eine Verletzung der Benutzer zur Folge haben. Bitte achten Sie darauf, die Heringe zur Befestigung des Tores immer so in den Boden einzuschlagen, dass sie nicht mehr herausragen. Andernfalls besteht Verletzungsgefahr beim Drauffallen. Der Aufbewahrungsbeutel ist kein Spielzeug. Erstickungsgefahr. Lesen Sie vor Gebrauch sorgfältig die beiliegende Anleitung. Bewahren Sie die Verpackung für Kommunikationszwecke auf. Entfernen Sie alle Verpackungselemente vor Gebrauch des Artikels.

EN: Warning! Not suitable for children under 36 months. Strangulation hazard due to risk of loop formation. Check the condition of the item before your child plays with it. In case of any damage, remove the item or the affected components from your child's reach. To be set-up and disassembled by adults only. Make sure article is set on a stable and even surface. An assembly on uneven surface could harm the stability of the article and injure users. Please make sure that the pegs for fastening the soccer goal are always driven into the ground in such a way that they no longer stick out. Otherwise there is a risk of injury when falling on it. The storage bag is not a toy. Danger of suffocation. Read manual carefully before use. Keep the packaging for any possible future correspondence. Remove all packaging elements before using the article.

Hergestellt für/Manufactured for:
myToys.de GmbH
Potsdamer Straße 192
10783 Berlin
Germany

Artikelnummer: 13273034



myToys