


GB

The smallest Mini Camera

It can record video with audio, take pictures.

Functions:

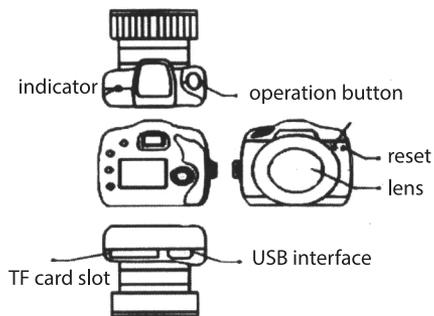

Operation

1. ON/OFF (standby mode)

Turn ON

-press the operation button for 2 seconds to turn on. Red indicator is on.

Turn OFF

-press the operation button for 4 seconds to turn off. Red indicator is off.

2. Take picture (from standby mode)

-press the operation button completely down, the red indicator will flash one time. If not in standby mode, change to standby mode before take picture.

3. Take video (from standby mode)

-press operation button for 2 seconds, then release it. The red indicator is blinking. To stop video, press operation button 1x (1second).

4. Low battery

- camera detects low voltage, blinks 5x with red indicator and saves the file, then it will shut down.

5. Recharge

-turn off the camera.

-connect USB cable and charger

-during charging, the red indicator is blinking, on full status its continuously red.

6. PC Connection

-turn on in standby mode

-connect USB cable to pc and camera

-PC will show disk drive

7. Reset

- wrong partition, error

-just press the reset knob in the reset hole.

-camera is now factory reset

8. Web Cam

-install the CD driver on PC.

-power on camera and connect USB.

-computer will show webcam sign.

Specifications

Video format:	AVI
Video Codec:	M-JPEG
Video resolution:	640x480
Picture mode:	JPG
Picture resolution:	1600x1200
Battery:	Lithium Polymer

MINI HD CAMCORDER

THE SMALLEST MINI CAMERA IN THE WORLD

DIE KLEINSTE MINI KAMERA DER WELT

Art. 28908



USER MANUAL

Bedienungsanleitung




AMEWI Trade e.K.
Nikolaus-Otto-Str. 6
33178 Borcheln

D

Die kleinste Mini Kamera

Sie nimmt Video mit Audio auf und kann Bilder aufnehmen.

Funktionen:

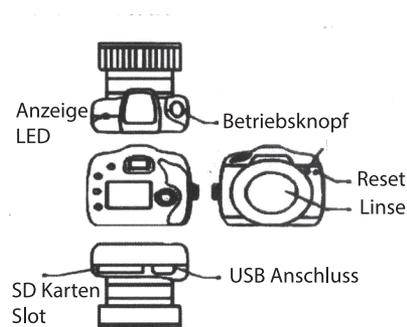

Betrieb

1. EIN / AUS (Standby Modus)

einschalten

-drücken Sie den Betriebsknopf für 2 Sekunden. Die Anzeige LED leuchtet rot.

Ausschalten

-drücken Sie den Betriebsknopf für 4 Sekunden. Die Anzeige LED erlischt.

2. Fotos aufnehmen (Standby Modus)

-drücken Sie den Betriebsknopf vollständig herunter, die LED blinkt 1x rot auf. Falls Sie sich nicht im standby befinden, so wechseln Sie erst in diesen Modus bevor Sie Fotos aufnehmen.

3. Video aufnehmen (standby Modus)

-drücken Sie den Betriebsknopf für 2 Sekunden. Die rote LED blinkt.

Um die Videoaufnahme zu stoppen drücken Sie den Betriebsknopf 1 Sekunde lang.

4. Schwacher Akku

-Kamera erkennt Niederspannung, blinkt 5x rot und speichert die Datei, dann wird es heruntergefahren.

5. Aufladen

-schalten Sie die Kamera aus

-verbinden Sie USB Kabel Ladegerät und Kamera

-während des Ladens blinkt die rote LED, Sie leuchtet dauerhaft sobald der Akku voll ist.

6. PC Verbindung

-schalten Sie die Kamera in Standby.

-verbinden Sie das USB Kabel mit der Kamera, der PC zeigt die Kamera an

7. Reset

-falsche Partition, Fehler

-drücken Sie den Reset Knopf

8. Web-Cam

-installieren Sie den CD-Treiber auf dem PC. Schalten Sie Kamera ein und schließen Sie USB an.-Computer zeigt Webcam-Zeichen.

Technische Daten

Video format:	AVI
Video Codec:	M-JPEG
Video Auflösung:	640x480
Bildformat:	JPG
Bild Auflösung:	1600x1200
Akku:	Lithium Polymer